

Apcupsd на Centos 7

APC UPS SMART 1500, подключен по USB.

Настройка на сервере:

```
$ sudo yum -y install apcupsd

$ sudo nano /etc/apcupsd/apcupsd.conf
UPSCABLE usb
UPSTYPE usb
LOCKFILE /var/lock
SCRIPTDIR /etc/apcupsd
PWRFAILDIR /etc/apcupsd
NOLOGINDIR /etc
ONBATTERYDELAY 6
BATTERYLEVEL 37
MINUTES 10
TIMEOUT 0
ANNOY 300
ANNOYDELAY 60
NOLOGON disable
KILLDELAY 0
NETSERVER on
NISIP 0.0.0.0
NISPORT 3551
EVENTSFILE /var/log/apcupsd.events
EVENTSFILEMAX 10
UPSCCLASS standalone
UPSMODE disable
STATTIME 0
STATFILE /var/log/apcupsd.status
LOGSTATS off
DATETIME 0
```

Проверяем:

```
$ sudo apcaccess
```

Настройка на клиенте:

```
[root@faust apcupsd]# cat apcupsd.conf | egrep "^[^#]"
```

UPSCABLE ether
UPSTYPE net
DEVICE _IP_cepвepa:3551
LOCKFILE /var/lock
SCRIPTDIR /etc/apcupsd
PWRFAILDIR /etc/apcupsd
NOLOGINDIR /etc
ONBATTERYDELAY 6
BATTERYLEVEL 41
MINUTES 12
TIMEOUT 0
ANNOY 300
ANNOYDELAY 60
NOLOGON disable
KILLDELAY 0
NETSERVER on
NISIP 0.0.0.0
NISPORT 3551
EVENTSFILE /var/log/apcupsd.events
EVENTSFILEMAX 10
UPSCCLASS standalone
UPSMODE disable
STATTIME 0
STATFILE /var/log/apcupsd.status
LOGSTATS off
DATETIME 0